
TO REPLACE THE CARTRIDGE FROM TONE ARM PLEASE FOLLOW THE PROCEDURES BELOW.

- Gently lift off the tone arm from the tone arm rest.
- By using your left hand to hold the tone arm and using your right hand to hold the rear portion of the cartridge. Then push the cartridge backwards and downwards according to the direction as shown to the left to separate the cartridge from the tone arm.
- Using either a tweezer or your fingers, carefully unplug the terminals from the cartridge.
- 4. Carefully connect the terminals to the new cartridge (not included).
- To re-install the new cartridge to the tone arm. First pleaselock the front end of the new cartridge on the hook of the tone arm.
- Press the rear side of the new cartridge upwards to lock it on to the tone arm.

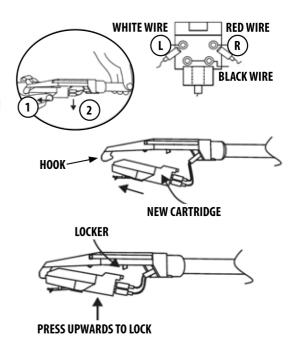

CAUTION: Please don't damage the stylus when installing the new cartridge.

Source: Electrohome EANOS300 Instuction Manual. Retreived from http://electrohome.com/wp-content/uploads/woocommerce_uploads/2014/10/EANOS300-en-manual.pdf